



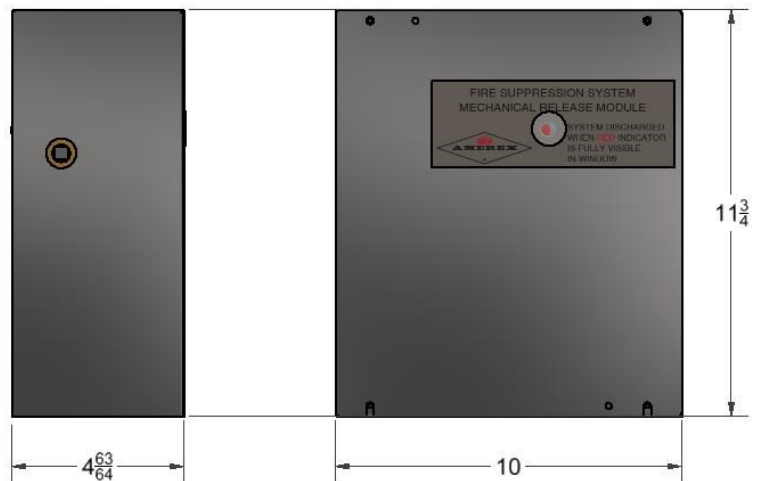

MECHANICAL RELEASE MODULE

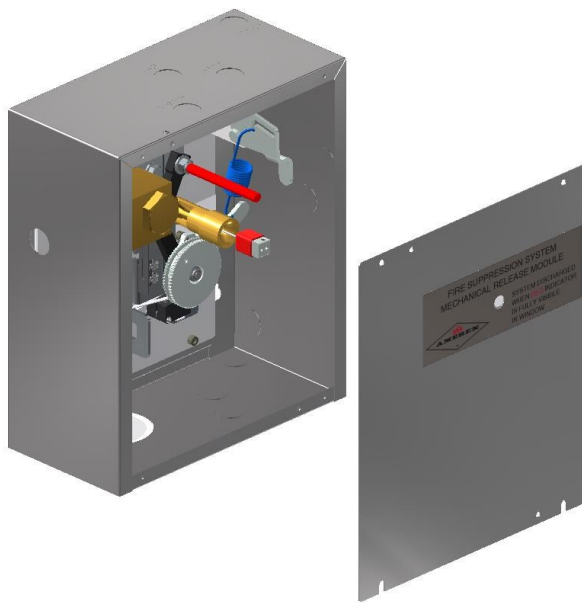

P/N: 18001

The new MRM combines the same features and functionality as the original MRM along with increased detection capabilities and far simpler means of setting the detection cable tension. The slide plate and collapsible column are now Teflon coated. The MRM is available in the above configurations, now preinstalled in its own enclosure.

Setting the detection cable tension does not require the use of any tools (once the cable is locked down into the large, knurled ratchet wheel). A large lever to the right of the ratchet wheel is used to increase the cable tension. Alignment of the bottom edge of the lever with markings on a label indicates when the proper tension has been achieved. Lowering cable tension to change out detection links is now also much simpler.

There is also a MRM available without the enclosure, P/N 11977. This has the same purpose and functionality as the MRM (P/N 18001). It is often used in conjunction with the Single Tank / MRM Enclosure (P/N 11978) or to upgrade from the MRM I.

